



PURION DISPLAY



- A Light indicator
- B Battery charge level
- C Walk assist
- D Range
- E Current speed

Use / buttons to select one of four assisted riding modes.

- Eco** Efficient support for maximum range
- Tour** Consistent support for longer rides
- Tour+*** Continuous support for energy-saving rides
- Sport** Powerful support for all types of riding
- eMTB**** Dynamic support for a natural feel
- Turbo** Maximum support for challenging rides

Functions

Switch lights on/off
3 sec. press

Display trip distance, total distance or range
2 sec. press

Reset the trip distance
3 sec. press

Change mph ↔ km/h
Hold and press

Activate Walk assist
Press Walk assist and hold

Use / buttons to select one of four assisted riding modes.

- Eco** Efficient support for maximum range
- Tour** Consistent support for longer rides
- Tour+*** Continuous support for energy-saving rides
- Sport** Powerful support for all types of riding
- eMTB**** Dynamic support for a natural feel
- Turbo** Maximum support for challenging rides

Functions

Switch lights on/off
3 sec. press

Display trip distance, total distance or range
2 sec. press

Reset the trip distance
3 sec. press

Change mph ↔ km/h
Hold and press

Activate Walk assist
Press Walk assist and hold



PURION DISPLAY



- A Light indicator
- B Battery charge level
- C Walk assist
- D Range
- E Current speed